


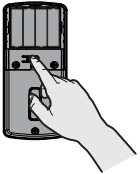






# WEISER

## Powerbolt<sup>1</sup>

KEYLESS ENTRY  
TOUCHPAD DEADBOLT

### How to Perform the Door Handing Process:

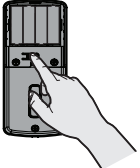- 1**  Press and release the "PROG" button. You will hear 2 long beeps.
- 2**  Press  .
- 3**  Press the  button once for LEFT Locking Latch.
- 3**  Press the  button once for RIGHT Locking Latch.
- 4**  Press the "PROG" button once. You will hear 1 short beep.

THE LEADER IN RESIDENTIAL SECURITY

213826 10/17


# WEISER®
 
## Powerbolt<sup>1</sup>

KEYLESS ENTRY  
TOUCHPAD DEADBOLT


### How to Add a Code:

1



Use a phillips screwdriver to remove the 2 set screws on the interior of the lock. Remove cover and set aside.

2

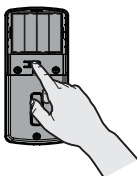


Press and release the "PROG" button. You will hear 2 long beeps.

3



Press the **12** button once.

4

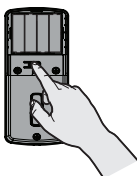


Press the "PROG" button once. You will hear 1 short beep.

5



Enter the new user code.

6

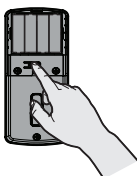

Press PROG. You will hear 1 beep if successful. If unsuccessful, you will hear 3 short beeps. Repeat from step 1 slowly.


# WEISER®
 
## Powerbolt<sup>1</sup>

KEYLESS ENTRY  
TOUCHPAD DEADBOLT


### How to Remove a Code:

1



Use a phillips screwdriver to remove the 2 set screws on the interior of the lock. Remove cover and set aside

2

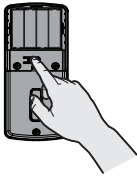


Press and release the "PROG" button. You will hear 2 long beeps.

3




Press the **34** button once.

4

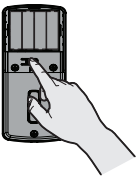


Press the "PROG" button once. You will hear 1 short beep.

5

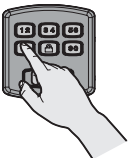

Enter the User Code you wish to delete.

6

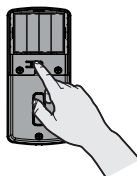

Press the "PROG" button. You will hear 1 beep if successful. If unsuccessful, you will hear 3 short beeps. Repeat from step 1 slowly.