






64007-004

Rev 04 BP

OPP Dummy Lever

www.weiserlock.com

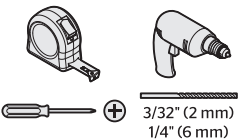
USA : 1-800-677-5625 • Canada : 1-800-501-9471

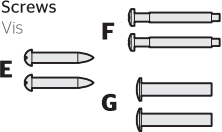Required tools Outils nécessaires	Parts in the box Pièces dans la boîte			
 <p>3/32" (2 mm) 1/4" (6 mm)</p>	Lever Levier  A	Optional Square Rose Rose carrée en option  B	Allen wrench Clé Allen  D	Screws Vis  E , F , G


1 Prepare door Préparation de la porte

A Cut out template and fold along fold line for desired backset. Place fold line on edge of door with centerline 38" (965 mm) from floor.

Découpez le gabarit et pliez-le sur le long de la ligne de pliage avec l'écartement souhaité. Placez la ligne de pliage sur le bord de la porte, avec la ligne médiane à environ 38" (965 mm) du sol.

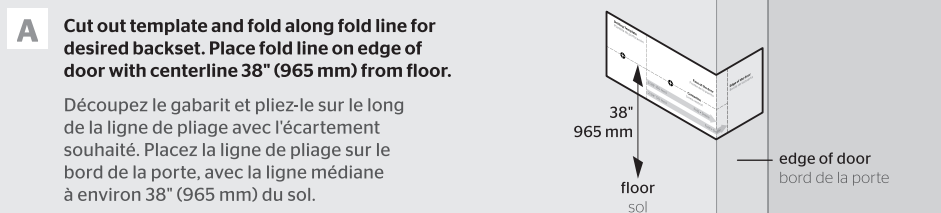

B Mark holes
Marquez les trous

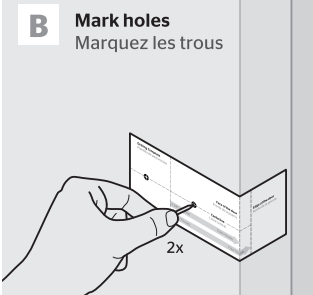


C Drill holes
Percez les trous

Wood door
Porte en bois


3/32" (2 mm)
1/2" (13 mm) deep

Metal door
Porte en métal

1/4" (6 mm)
through door à travers la porte

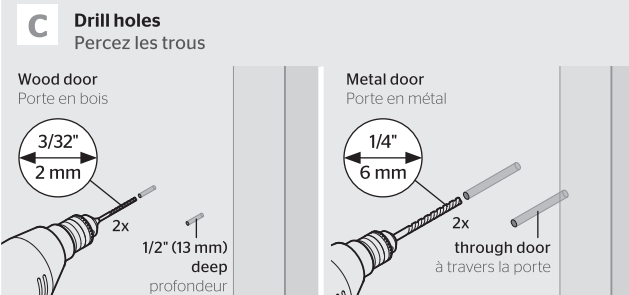

Instructions continue on reverse
Suite des instructions au verso

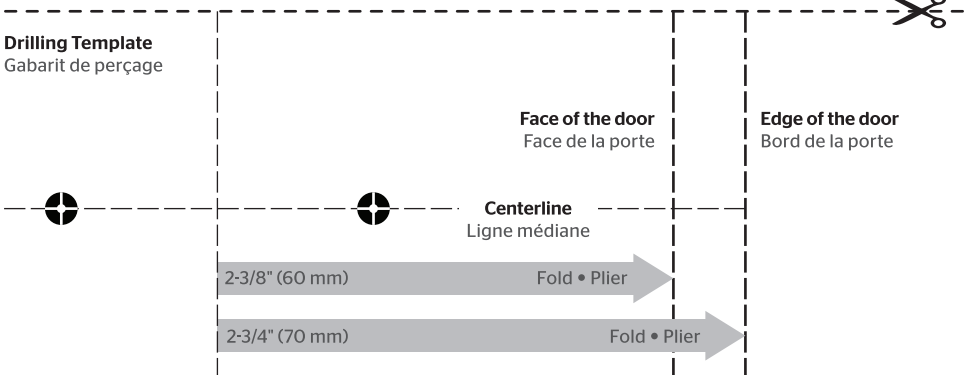


2


Install lever Installation du levier

A Install lever base.
Installez la base du levier.


Wood door
Porte en bois

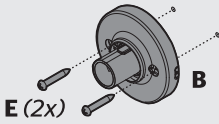

Metal door
Porte en métal

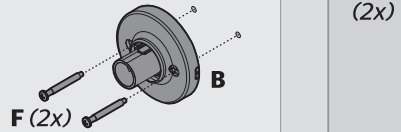


B Install lever.
Installez le levier.

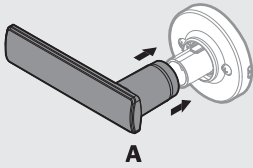

C Tighten pre-installed set screw.
Serrez la vis de pression préinstallée.

clockwise
horaire

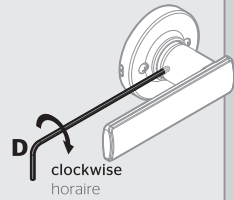

©2020 Spectrum Brands, Inc.

Drilling Template
Gabarit de perçage

Edge of the door
Bord de la porte

Face of the door
Face de la porte

Centerline
Ligne médiane

Fold • Plier

2-3/8" (60 mm)

Fold • Plier

2-3/4" (70 mm)

